



Craving Some Creativity.com

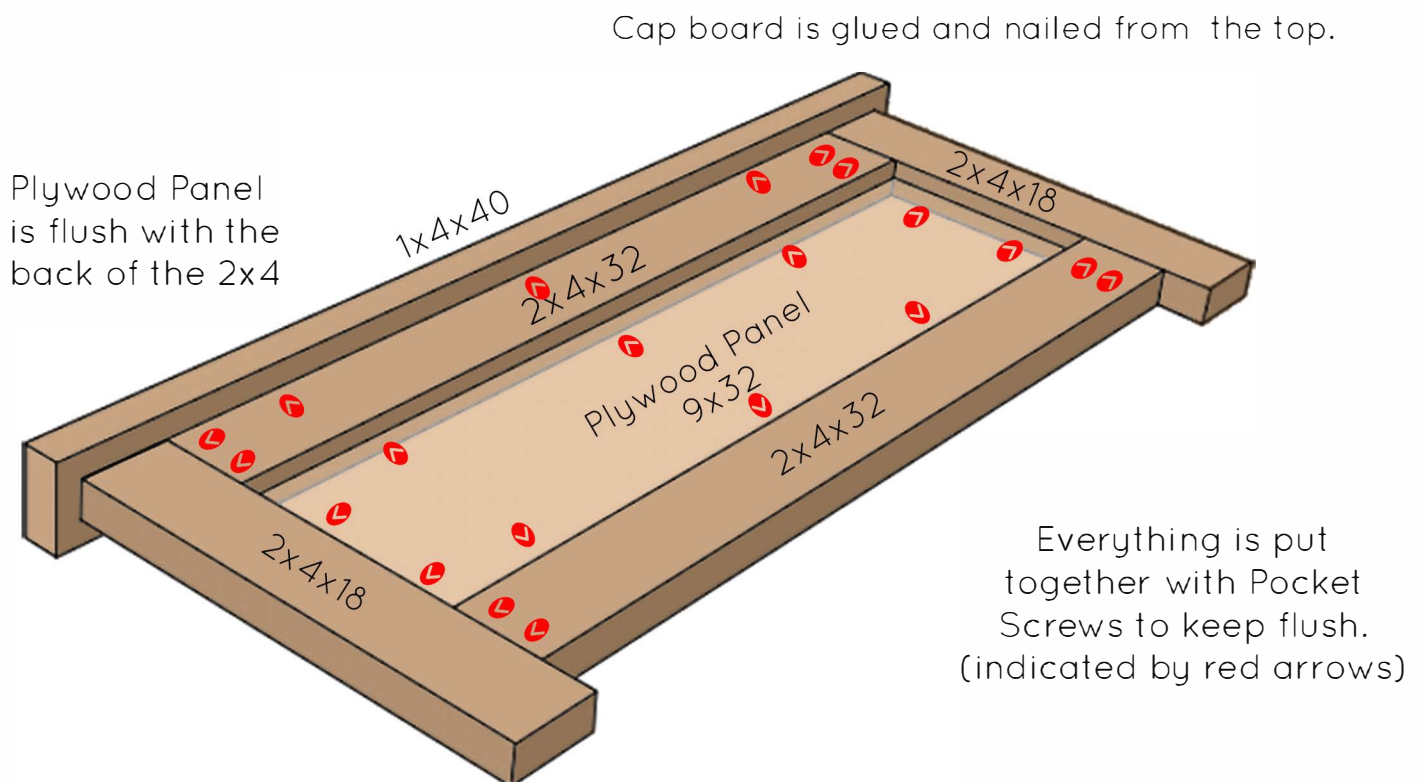

Join with glue
and 2 inch nails
through the top
and bottom
into the slats

Nail the back board
with 2 inch nails

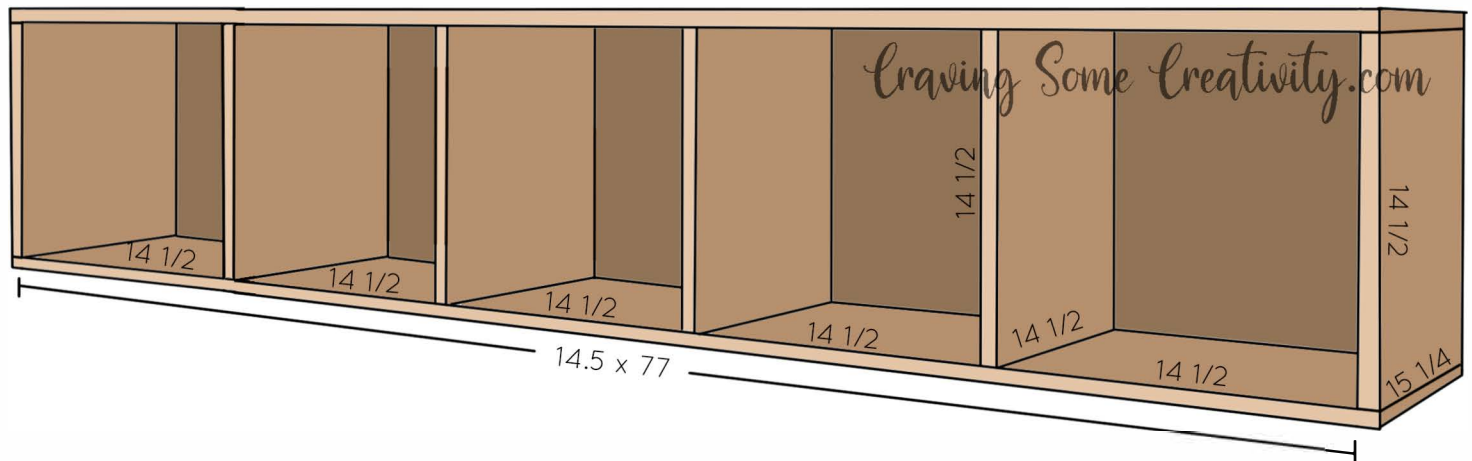

Craving Some Creativity.com



Use 2 or 2.25 inch screws to attach headboard legs.
Screw from the back of the legs into the storage frame.

Use 1.25 or 1.5 inch screws to attach footboard.

The information contained within is for general information purposes only. While I do my very best to keep the information up-to-date and correct, I make no representations or warranties of any kind, express or implied, about the completeness, accuracy, reliability, suitability or availability with respect to the website or the information, products, services, or related graphics contained on the website for any purpose. Therefore, any reliance you place on such information is strictly at your own risk.